ECE 321 - Homework #2

Tmperature and Calibration. Due Monday, November 16th

Please make the subject "ECE 321 HW#2" if submitting homework electronically to Jacob_Glower@yahoo.com (or on blackboard)

Temperature Sensors: Voltage Output


1) A MF52A1103F3380 thermistor from Digikey has a temperature - resistance relationship of

$$R = 10,000 \exp\left(\frac{3380}{T + 273} - \frac{3380}{298}\right) \Omega$$

where T is the temperature in degrees Celsius.

1) Design a linearizing circuit (find Ra and Rb) so that the resistance is approximately linear from 0C to +30C. Plot the resulting resitance vs. temperature relationship.

$$Z = R_b \mid\mid (R_a + R)$$

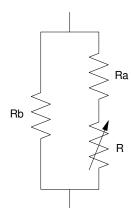

- 2) Using the linearizing circuit from part 1, design a circuit which outputs
 - -10V at 0C
 - +10V at +30C
 - Proportional in between.

Plot the resulting output voltage vs. temperature.

3) Determine a caliration function of the form

$$T = aV + b$$

to determine the temperature based upon the output voltage from your circuit in problem #2

- What is the maximum calibration error?
- 4) Determine a calibration function of the form

$$T = aV^2 + bV + c$$

to determine the temperature based upon the output voltage from your circuit in problem #2

• What is the maximum calibration error?

Temperature Sensors: Frequency Output

5) Determine the frequency of the following 555 timer with R being the linearizing circuit from problem #2.

Note: For this 555 timer circuit

$$t_{on} = (100 + Z) \cdot C \cdot \ln(2)$$
$$t_{off} = Z \cdot C \cdot \ln(2)$$


$$f = \left(\frac{1}{t_{on} + t_{off}}\right)$$
 Hz

- 6) In CircuitLab, simulate the 555 timer at T = 15C.
 - Does the simulated frequency match your computed frequency?
- 7) Determine a calibration function of the form

$$T = a \cdot Hz + b$$

where Hz is the frequency of the oscillator over the temperature range of 0C to 30C

• What is the maximum calibration error for your temperature sensor?

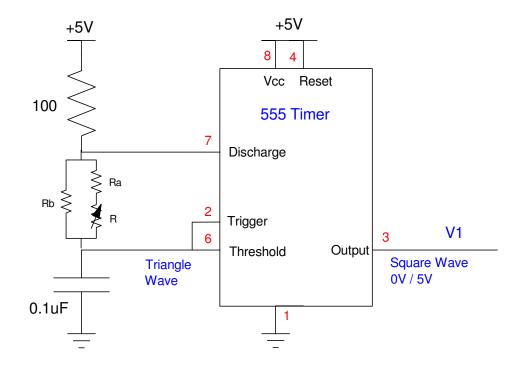

5 point Bonus! Build this circuit replacing the linearizing circuit with the thermistor in your lab kit. Measure the frequency resulting from placing the thermistor in

- · ice water
- · room temeprature
- hot water